



MOUNTING SCHEME

ZERO - 12V

IMPORTANT HINTS FOR THE MOUNTING

- Keep the Feed Pump -C- below the seawater level. The magnetic driven pumps are not self priming and need to get flooded. If the Feed Pump needs to get mounted above the seawater level, please contact our assistance.
- Keep the connection between A, B and C (Feed Pump, Prefilters and High Pressure Pump) as short as possible!
- Keep B and C, if possible, below the seawater level as well.
- Max head between C and A = 1 meter. If greater, please contact our assistance before mounting the Feed Pump.

Online instructions here:

<https://forum.bluegold-watermakers.com>



